

SINGLE
OR
MODULAR
BOILERS

PUMPS

BCOND-NEUT-30L-PUMP

 
Boiler condensate neutralising
tank with pump

USER INSTRUCTION MANUAL

- The BCOND-NEUT-30L is designed for single or modular boilers with outputs of up to 800kW

BCOND-NEUT-30L - TOP ENTRY

The BCOND-NEUT-30L is designed for single or modular boilers with outputs of up to 800kW.

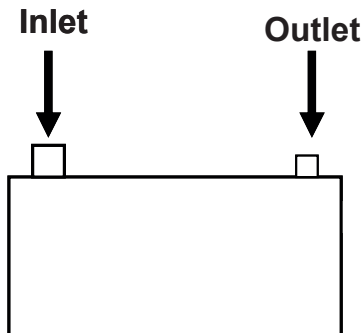

STEP BY STEP

To ensure continued neutralisation of boiler condensate the granules need to be replaced every 6 to 12 months depending on running hours and condensate volumes from boilers. The ph level on the outlet needs to be checked every 6 months to ensure boiler condensate continues to be neutralised.

- Step 1** Position tank in a level horizontal position and align with outlet pipe work from boiler to inlet of tank.
- Step 2** Remove lid and fill with 10mm lime chipping in line with bottom of outlet connection
- Step 3** Refit lid and connect inlet and outlet pipe work (10mm connection on the pump). The outlet should be connected to a suitable drain.
- Step 4** Test the pipe work and connection to ensure fully sealed and there are no leaks.

The unit is designed for internal use only, if fitted in unheated areas ensure the unit is adequately lagged to avoid freezing.

ANNUAL MAINTENANCE

During annual maintenance, remove the pipe work from inlet on top entry model only, remove lid, remove any remaining chipping and replace chippings in line with bottom of outlet connection.

CONFORMITY

All data contained in these specifications are solely intended to describe the product and do not constitute warranted characteristics in the legal sense. Subject to technical change.

DiversiTech International Ltd
 Glaisdale Drive East,
 NG8 4LY Nottingham
 United Kingdom
 Email sales@diversitech.com
 Phone +44(0)115 900 5858

PUMPS
BCOND-NEUT-30L
 Boiler condensate neutralising tank
 with pump

