



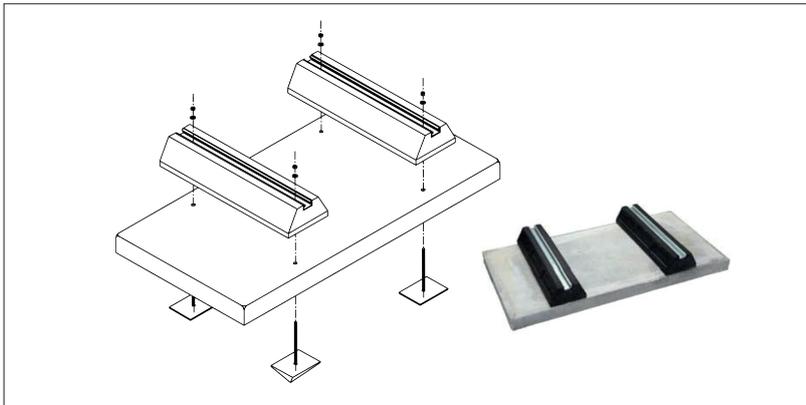

■ FLEXI LITE SLAB AND FOOT KIT



A low cost innovative solution for floor mounting air conditioning units and ASHP. The FLEXI Lite Slab and Foot kit avoids the high cost and time consuming need to construct a concrete base and comes complete with FLEXI rubber mounting feet. It can be delivered to site with minimum preparation and can be assembled in minutes. It also suits most brands of domestic air source heat pumps and air conditioning units.

■ FEATURES

- Low cost and rapid installation time
- Easy to transport and locate
- Safe working load – 600kg
- Simple to construct
- Fixing pack to secure feet to the slab
- Fixing pack to secure a heat pump to the feet

■ RELATED PRODUCTS

- Wooden guard
- ASHP Soakaway
- Collection tray
- Floor bracket kit

■ THE PACKAGE

- Flexi Slab
- 2 or 3 x Flexi Feet
- 4 x fixing plate
- Fixings
- Installation instructions

| Part code | Description | Specifications |
|----------------|---|------------------|
| FF-UC3-S | Flexi Lite Kit - small | 900 x 600 x 175 |
| FF-UC3-M | Flexi Lite Kit - medium | 1050 x 600 x 175 |
| FF-UC3 | Flexi-Lite Slab Kit | 1200 x 600 x 175 |
| FF-UC3-3 | Flexi lite Slab Kit - 3 FEET | 1200 x 600 x 175 |
| FF-UC3-XL | Flexi-Lite Slab Kit - extra large | 1650 x 865 x 175 |
| FF-UC3-3XL | Flexi-Lite Slab Kit - 3 FEET - extra large | 1650 x 865 x 175 |
| FF-UC3-3XL-150 | Flexi-Lite Slab Kit - 3 FEET (150mm feet) - extra large | 1650 x 865 x 225 |



FLEXI FLEXI LITE SLAB & FOOT KIT

The DiversiTech International sales team are available to answer your questions or queries on this product. Our experts are waiting for your call +44 (0)115 900 5858 or if you prefer send an email to sales@diversitech.com or visit www.diversitech.global

DIVERSITECH[®]
INTERNATIONAL

Glaisdale Drive East
Nottingham NG8 4LY
United Kingdom



■ INSTALLATION PROCESS



STEP 1

Position the lightweight slab in the required location of the ASHP unit.



STEP 2

Place both feet on the lightweight slab to match the pitch of the feet.



STEP 3

Insert all four base plates through the lightweight slab and reposition to the required location of the ASHP unit.



STEP 4

Place both feet onto the threads and secure with nuts and washers.



STEP 5

Secure the ASHP units onto the kit - the installation is complete.

FLEXI FLEXI LITE SLAB & FOOT KIT

The DiversiTech International sales team are available to answer your questions or queries on this product. Our experts are waiting for your call +44 (0)115 900 5858 or if you prefer send an email to sales@diversitech.com or visit www.diversitech.global

DIVERSITECH[®]
INTERNATIONAL

Glaisdale Drive East
Nottingham NG8 4LY
United Kingdom