



AUDIBLE ALARM

INSTRUCTION MANUAL

DiversiTech International Ltd.

Glaisdale Drive East, NG8 4LY
Nottingham United Kingdom
Email sales@diversitech.com
Phone +44(0)115 900 5858



AUDIBLE ALARM

INSTRUCTION MANUAL

CONNECTING A SONIN WATER ALARM

1. Remove the SONIN water alarm from the outer packaging (**Fig A**).
2. Cut off the remote sensor with wire cutters (**Fig B**).
3. Shut off electrical power at the fuse box before making any connections.
4. Strip back both wires and connect to high level safety switch leads on the condensate pump via inline switch enclosed (**Fig C**).

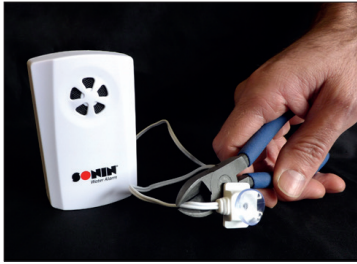


Fig B

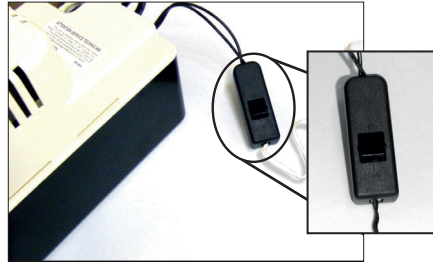


Fig C

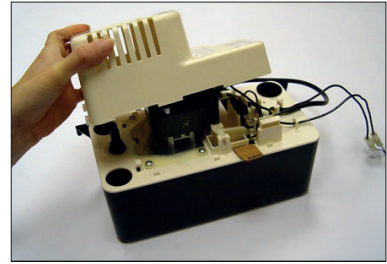


Fig D

5. Undo retaining screw on motor cover and remove the motor cover from the condensate pump (**Fig D**).
6. Change over the spade terminal on the safety switch from the middle terminal (NO = normally open) to the top terminal (NC = normally closed (**Fig E, F and G**).

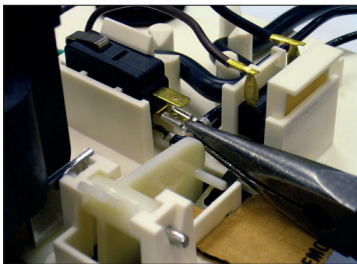


Fig E

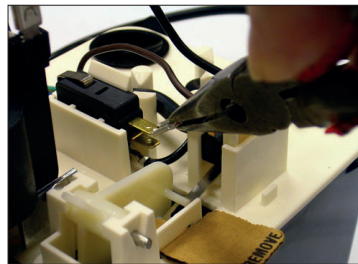


Fig F

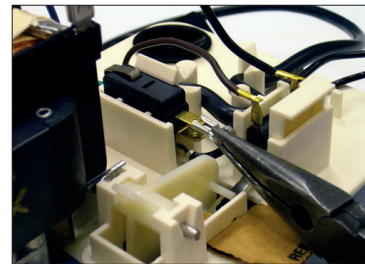


Fig G

7. Remove the back cover of the water alarm and fit a 9V battery (not supplied) (**Fig H**).
8. Test alarm by raising the high level float arm connected to the safety switch.
9. Replace the motor cover and re-fit retaining screw.
10. Replace the back cover (**Fig H**) and mount using the single screw fixing point (**Fig I**)



Fig H



Fig I

The DiversiTech International sales team are available to answer your questions or queries on this product. Our experts are waiting for your call **+44(0)115 900 5858** or if you prefer send an email to **sales@diversitech.com**, or visit **www.diversitech.global**

FOR FURTHER INSTALLATION ADVICE PLEASE CALL THE TECHNICAL SUPPORT HELPLINE ON +44 (0)115 900 5858.